


RAF Medium (Taskmaster) tractor

Assembly diagram & notes

For 1:72 & 1:48 versions

1

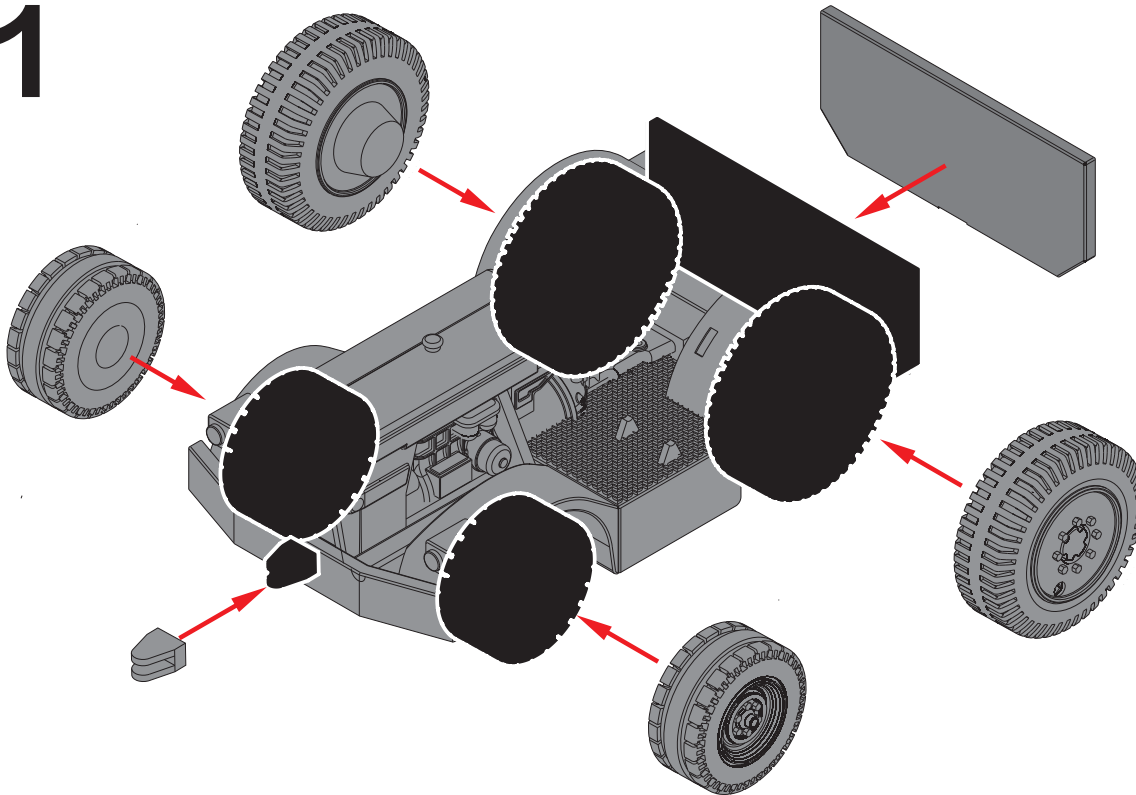

Remove all flash,
mould lines or
feed stubs from all parts.
Assemble parts with
cyanoacrylate
adhesive (super glue)
or epoxy cement.
Drill holes as necessary
for locating pins of parts.

2

