


USAF A-12 & SR-71 CREW ACCESS STEPS ASSEMBLY INSTRUCTIONS


1:72 or 1:48 scale © Aircraft In Miniature Limited - 2017

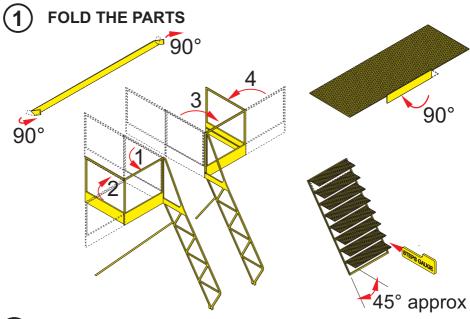


2 ASSEMBLE STEP SIDES AND PLATFORM

Assemble parts with cyanoacrylate (super glue) or epoxy cement.

Brass parts can be soldered.

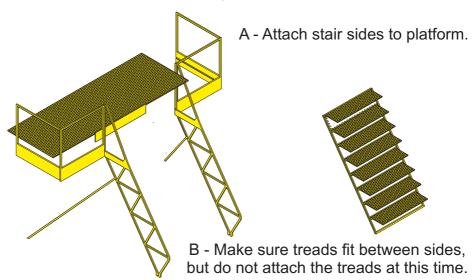

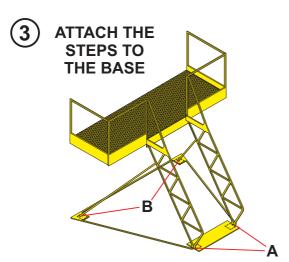

- A Put the stair sides on the base frame
- B Fold the side braces out until they fit in the sockets on the base frame.

 If necessary, trim the ends of the side braces until the platform is parallel to the base frame.
- C Attach the steps to the base frame.

(4) FINAL ASSEMBLY

